

CANTING CUFF DIRECTIONS

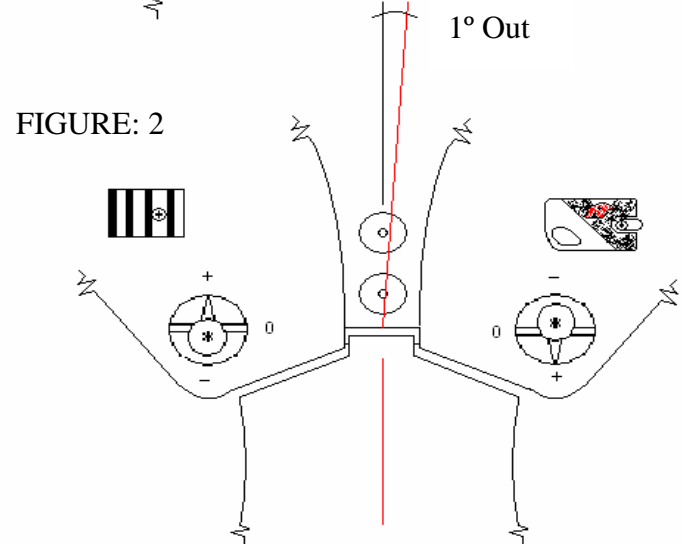
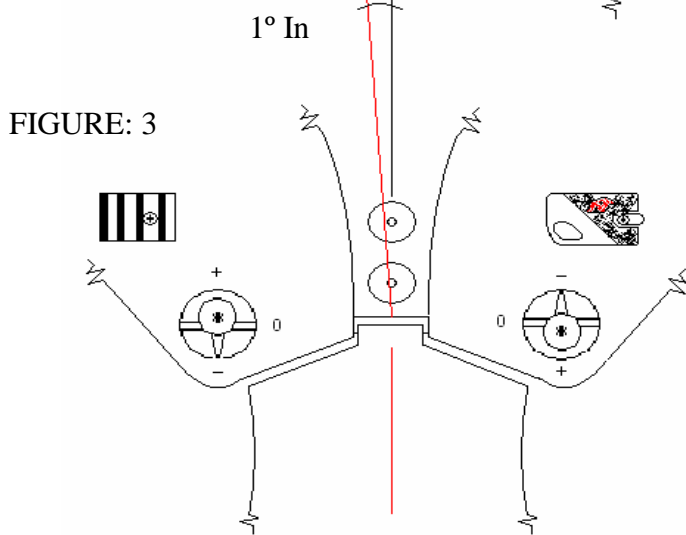
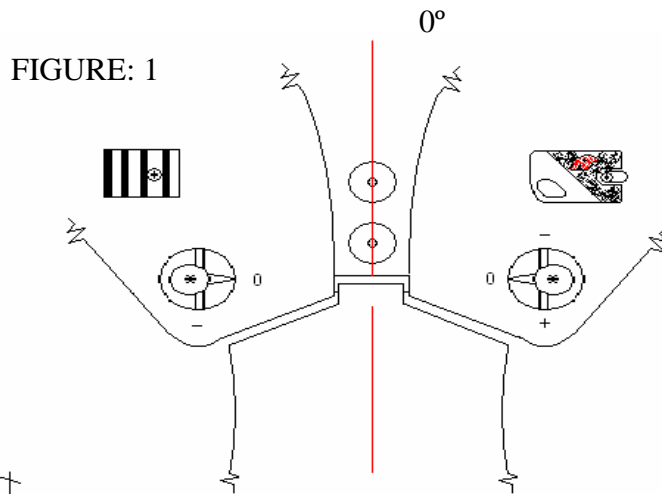


FIGURE 1: Shows the upper cuff at zero. Both points of the canting cam are pointing at the zero. This is the setting that the boot comes set as. At this setting the cuff is aligned at the same angle as the lower boot. The lower boot will come with 1 degree of outward cant / alignment.

FIGURE 2: Shows the upper cuff set at its max outward cant of + 1 degree. Both points on the canting cam are pointing at the + sign. Here you have 1 degree of outward cant beyond the lower cuff that is set at 1 degree out.

FIGURE 3: Shows the upper cuff set in its max inward cant of -1 degree. Both points on the canting cam are pointing at the - sign. Here you have 1 degree of inward cant beyond the lower shell that is set at 1 degree out.

PROCESS STEPS

1. Loosen all rear rivets and side canting cam rivet. Just loosen do not remove.
2. Adjust the cam canting cuff rivets with your tool to correct position. Remember to always adjust each side opposite of the other.
3. Secure / tighten your side canting rivets first. Secondly secure / tighten your rear rivets.
4. Ski and feel difference.

