


Shortening Red Rear Spoiler

The spoiler can also be customized by cutting it to create a shorter spoiler. The Shorter spoiler will not affect the forward flex of the boot, while still increasing forward lean and rapping of the calf.

- 1) Mark the spoiler and cut spoiler to your appropriate size. Note that the spoiler should be short enough so that it does not interfere with lower shell. The images below show the marked spoiler, the difference between a shortened and full length spoiler, and lastly an upper cuff with an attached shortened spoiler.



A Marked spoiler that is being cut down.

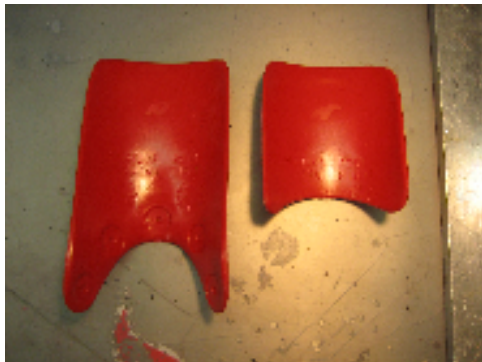

Regular and shortened spoiler



Attached shortened spoiler

- 2) Follow step (3) and step (7) from Installing the Red Rear Spoiler. Removing the upper cuff is not necessary. The important part is that the center line on the spoiler matches the center line on the rear of the boot and that it does not constrict the lower shell.